


WIRING DIAGRAM

CTC LPT202 AND LPT302 LOOP POWER TRIAXIAL SENSORS

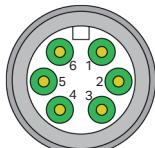

6 Pin MIL
Connector

Pin 1 Axis Y Loop Power

Pin 2 Axis X Loop Power

Pin 3 Axis Z Loop Power

Pin 4 Axis Y Loop Power Return

Pin 5 Axis Z Loop Power Return

Pin 6 Axis X Loop Power Return

