 
JB932


Five-Position Plugs for Triaxial Input and Output Junction Boxes



 JB932-1A








Five-Position Plug, Spring Cage, for use in JB and TSB Triaxial Input and Output Junction Boxes

 JB932-2A









Five-Position Plug, Screw Terminal, for use in JB Triaxial Input and Output Junction Boxes

  JB933-1A







Five-Position Plug, "T" Plug, Screw Terminal, for use in JB and TSB Triaxial Input and Output Junction Boxes