 
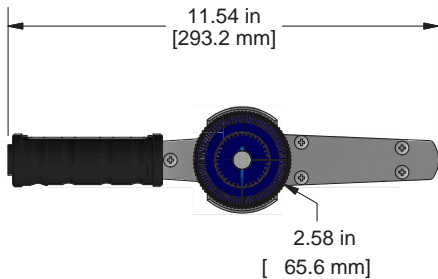 


IT1020


Accelerometer Torque Wrench

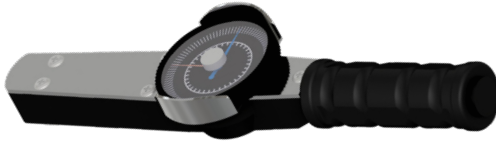






Product Features

$\frac{3}{8}$ in. Drive, Dual Scale Torque Wrench with 2 in./lb increments

- Ensures sensors are properly fastened
- Attachments available to use with all PRO and CTC sensors
- Prevents overtightened or loose sensors

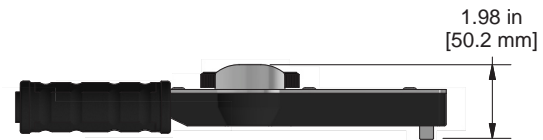

Crowfoot Adapters, Standard

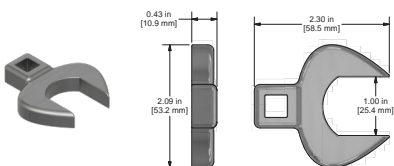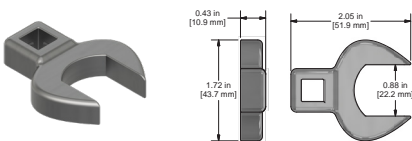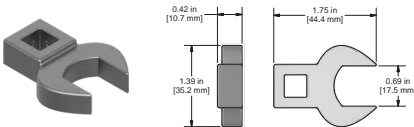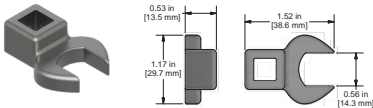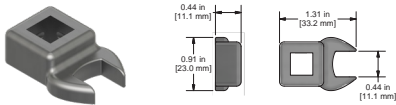

IT102-1A

$\frac{7}{16}$ in. Crowfoot, for $\frac{3}{8}$ in. Drive Torque Wrench
Fits AC104, AC194, and similar side exit sensors with $\frac{1}{4}$ -28 threaded bolt

IT102-2A

$\frac{9}{16}$ in. Crowfoot, for $\frac{3}{8}$ in. Drive Torque Wrench
Fits AC140, AC220, AC240 series sensors with $\frac{9}{16}$ in. hex

IT102-3A

14 mm Crowfoot, for $\frac{3}{8}$ in. Drive Torque Wrench
Fits AC192, AC292 series sensors with $\frac{11}{16}$ in. hex

IT102-4A

22 mm Crowfoot, for $\frac{3}{8}$ in. Drive Torque Wrench
Fits AC102, AC135 and similar top exit sensors with $\frac{7}{8}$ in. hex

IT102-5A

1 in. Crowfoot, for $\frac{3}{8}$ in. Drive Torque Wrench

