


TRIAxIAL WIRING INSTRUCTIONS

SB102 SERIES SWITCH BOX

1. Strip outer jacket of cable back 1¼ in. and remove all of the shielding.
2. Separate the internal wires from the shield and twist the shield.
3. Strip red, black, green, and white insulation back ¼ in.

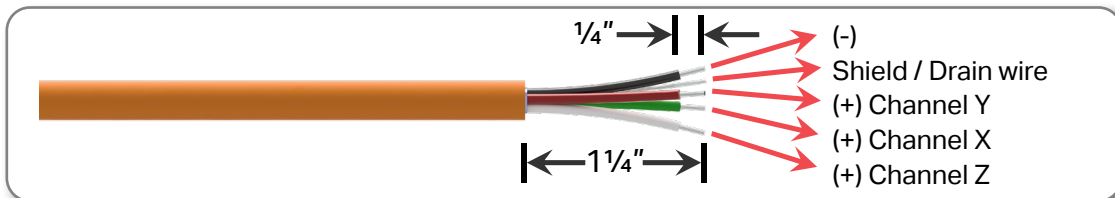

4. Locate the appropriate plug, identified by channel number, remove the plug and install the wires using a small flathead screwdriver. Push plug back into location

Orientation is as follows:

- a. Red insulated conductor wire is connected to the first channel used.
- b. Red insulated conductor wire is connected to the second channel used.
- c. Red insulated conductor wire is connected to the third channel used.
- d. Black insulated conductor wire is connected to (-) and must be applied to each channel.
- e. Shield drain wire is connected to ground (GND) and needs only one termination.




[Visit our website](#) to download the full manual for SB102 enclosures.



TRIAxIAL WIRING INSTRUCTIONS

SB102 SERIES SWITCH BOX

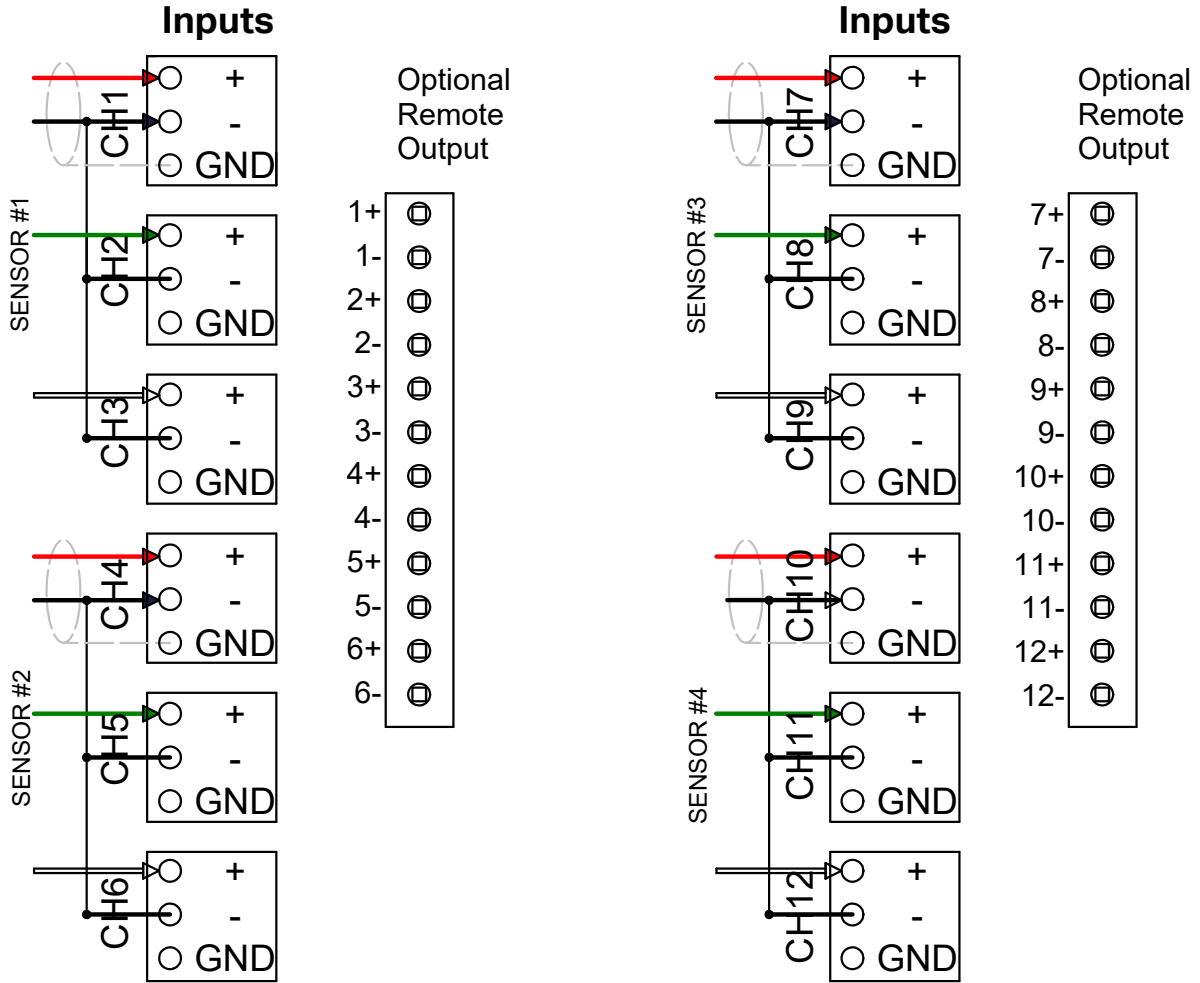

Sensor Inputs
 Red = Positive Y Axis
 Green = Positive X Axis
 White = Positive Z Axis
 Black = Common
 Grey = Shield (Ground)

