

VIBRATION ANALYSIS HARDWARE



CR202 Series Cable Reduction Box 16 Sensor Inputs Product Manual

TABLE OF CONTENTS

•	Introduction	.3
•	Product Description	.3
•	Product Dimensions and Diagram	.4
•	Mounting Instructions	.5
•	Conduit Entry	.6
•	Grounding	.7
•	Installation of Sensor / Signal Input Cable	.7
•	Warranty and Return Information	10



Introduction

CTC cable reduction box solutions offer a reliable and economic means of consolidating up to 16 vibration channels into one multi-conductor cable.

CR202 Series Cable Reduction Box Overview: Eight to 16 accelerometer inputs (eight to 16 measurement channel outputs), stainless steel enclosure

The CR202 stainless steel cable reduction box can reduce the individual cables of up to 16 accelerometers into one multi-conductor cable. Input wiring from each sensor is connected to the box via quick release terminal blocks. Each terminal block includes three inputs – positive, common and shield, the corresponding output terminal blocks are marked within the enclosure and also feature three connection inputs – positive, common and shield. Multi-conductor cabling with eight, 12 or 16 paired wires is wired to each output terminal block inside the enclosure. The cable exits through the bottom of the box as one single multi-conductor cable to provide input to a vibration switch box or online system for data collection.

Rated for NEMA 4X (IP66), the CR202 can withstand harsh environments including temperatures ranging from -58 °F to 180 °F (-50 °C to 82 °C). The box is also resistant to hose-directed fluid and corrosion. A twist lock is installed on the door allowing the box to be sealed from the elements when not in use.



PRODUCT DIMENSIONS

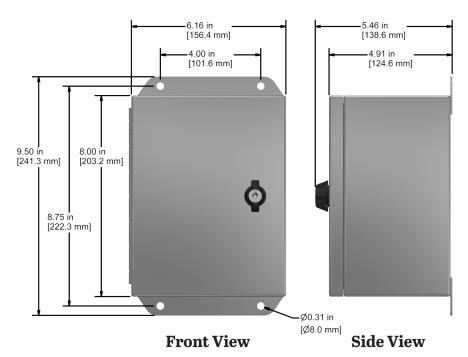


Figure 1. Dimensions

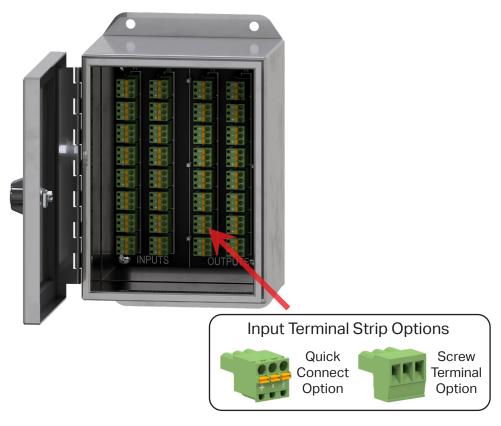


Figure 2. Diagram



MOUNTING INSTRUCTIONS

Note: If you have purchased a cable reduction box without cable entries provided, you should add your own entry prior to mounting the cable reduction box. CTC does not recommend putting holes in the top of the cable reduction boxes due to access and moisture concerns.

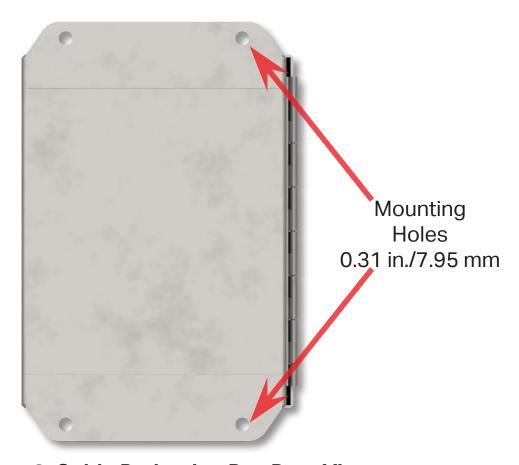


Figure 3. Cable Reduction Box Rear View



CONDUIT ENTRY

If you are running conduit to your enclosure, ensure the conduit cable entry enters from the bottom of the enclosure when mounted.

Note: To ensure moisture will now flow into the enclosure, a hole should be drilled at the lowest point in the conduit to provide drainage for any moisture.

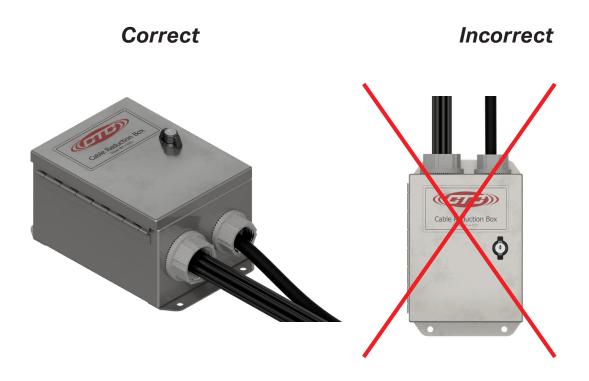


Figure 4. Conduit Entry for Cable Reduction Box



GROUNDING

In order to avoid potential ground loop problems, the CR202 series is not grounded. All cabling, including the shield drain, should be passed through to the final termination point.

SENSOR INSTALLATION

Installation of Sensors/Signal Input Cable

1. Feed blunt-cut end through the cable entry at the bottom of the enclosure.

Note: It is recommended that cables are marked on both ends.

For cord grip cable entry, take off the cord grip cover with bushing and run cable into enclosure, hand tighten cord grip cover to base to prevent damage of cord grip.



Figure 7. Cord Grip Entry




- 1. Strip outer jacket of cable back 11/4 in. and remove all of the shielding.
- 2. Separate the internal wires from the shield and twist the shield.
- 3. Strip red and black insulation back 1/4 in.



Figure 8. Stripped Wire

- 4. Locate the appropriate plug, identified by channel number, remove the plug and install the wires using a small flathead screwdriver. Push Plug back into location. Orientation is as follows:
 - a. Red insulated conductor wire is connected to (+).
 - b. Black insulated conductor wire is connected to (-).
 - c. Shield drain wire is connected to ground (GND).
 - d. Depress selected position button to open terminal for respective wire (may require a mini flathead screwdriver).



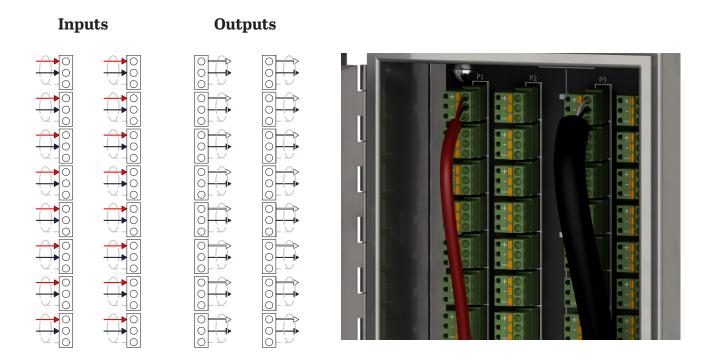

SENSOR INPUTS Red/White = Positive Black = Common Grey = Shield/Ground

Figure 9. Connecting Cables to Switch Box

5. Insert plug into the appropriate PC board connector and double check to ensure that the cable is going to the correct channel.



WARRANTY AND REFUND

Please visit www.ctconline.com to view a complete recapitulation of our warranty and refund policies.

CONTACT INFORMATION

Connection Technology Center, Inc. (CTC)
7939 Rae Blvd.
Victor, NY 14564
1.585.924.5900
sales@ctconline.com
www.ctconline.com



Mm-CR202-16/Rev B